



Protect Your Home & Family  
With  
RangeSafe Knobs™



## INSTALLATION GUIDE

*Please read installation instructions completely BEFORE beginning. Then follow them step-by-step. Don't worry, it's easy and we are here to help if needed.*

If you prefer, you can access our installation video on the RangeSafe Website [www.rangesafe.com](http://www.rangesafe.com) => Go to "About Us" then hit "Installation"

Recommended tools: Phillips head screwdriver, hammer, & non-greasy cleaner (such as Windex)

Steps:

- 1) Check that all parts are included: Knob, bezel (which are the rings that go below the knob), 6 plastic inserts in bags, and 3m thermal tape (pre-attached), possible extension if needed.
- 2) Remove your existing knob from the range stem. It should simply pull right off. Tip: If it is difficult to pull, use a rubber glove for a better grip.
- 3) From the 6 plastic inserts in each bag provided, determine which insert fits your stem best. **DO NOT FORCE THE INSERT DOWN THE STEM.** It should slide on and off snugly, with only a little effort, but not past the end of the insert ( see photo)



**Note:** Each insert is marked by a letter and you will use the same letter for each knob once you determine the best fit.

- 4) Not all ranges have a bezel (a ring that will still be on the range). If yours does have one, remove it with a screwdriver, some others maybe fixed with double sided tape, these can also be removed easily by applying heat from a hairdryer.
- 5) You should now have a flat surface, with only the stem sticking out. Clean the surrounding area with a non-greasy cleaner, such as Windex.
- 6) Leave the correctly fitting insert on the stem, but not pushed on hard. Take the RangeSafe knob and a bezel, and hold them in your hand
- 7) Keeping the lines face up, set the knob onto the stem and insert. This will allow the insert to be set inside the knob in the correct direction. **Apply a little pressure so that when you pull the knob back off, the red insert stays inside the knob.**

- 8) Remove the knob and bezel. The insert should come off with them. Hold them in your hand and slightly tap the insert with a hammer or screwdriver until it is close to flush against the knob.

**It's time to test!**

**DO NOT REMOVE THE BACKING FROM THE TAPE JUST YET**

- 9) Making sure the lines are facing up, put the knob with bezel onto the range stem. Use one hand to hold the bezel still and use the other hand to test and make sure the knob works...simply pinch, push and turn!



- 10) Now that you have tested to ensure that everything seems just right, return the knob to the up-right (off) position with lines facing up. Remove the knob and the bezel together.
- 11) Peel the backing paper off the 3m thermal tape that is on the bezel. Make sure you are installing it in the right position, with the lines upward, push the knob and bezel onto the stem gently until the knob hits the face of the range.
- 12) Hold the knob against the range for 20 seconds with pressure applied.

Should you find for any reason the RangeSafe knob is not in the correct position and the bezel is stuck to the face of the stove, apply heat using a hair dryer to loosen the bezel and reinstall as needed.

**Congratulations. You did it!** Test the knob again by pinching the two buttons together, pushing the knob in, and turning!

Repeat steps 1-12 for each additional RangeSafe Knob, using the same insert you already identified as being the correct one.

If you are having any problems with installation, please contact us at [434-229-7401](tel:434-229-7401) or email [info@rangesafe.com](mailto:info@rangesafe.com) and we will be happy to assist.

